

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型

MAZDA 3 / AXELA 2nd BL 2009-2013
MAZDA 5 2nd CR 2005-2010 / 3rd CW 2011-
FORD FOCUS MK3
FORD KUGA ESCAPE

PART NO. 8553


Contents 內含配件

※ Please apply hand tools for installation
安裝過程請使用手動工具

1. Front Sway Bar 28mm 前防傾桿 1PCS
2. Bracket (Wide & Narrow) 防傾桿固定座(寬/窄) 4PCS
3. Stabilizer Bush 防傾桿橡皮 2PCS
4. Rubber Lock Ring 橡膠固定環 2PCS
5. Stainless Steel Clamp Ring 不鏽鋼束環 2PCS



Please select appropriate brackets and adjust the distance between bushings per your vehicle.
請依車型選擇適當固定座，並依車種調整防傾桿橡皮間距

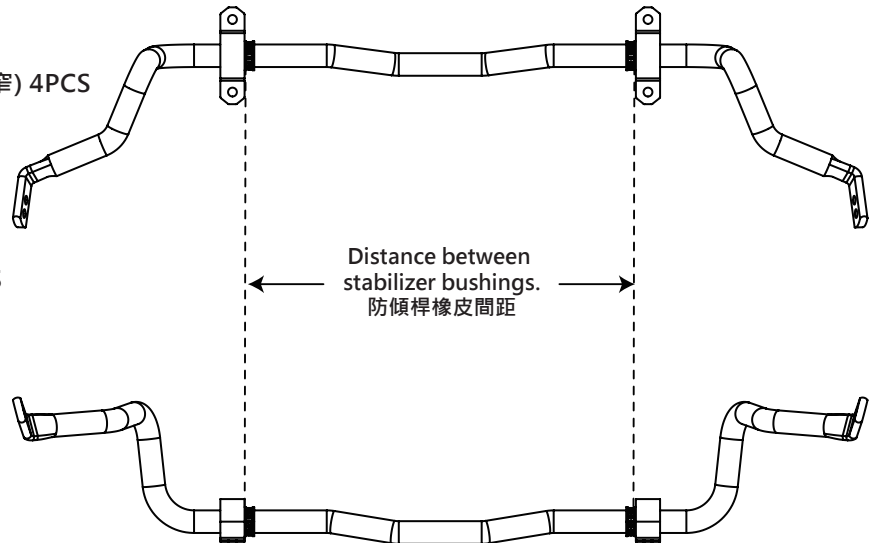

Recommended Distance between stabilizer bushings.

固定環間距參考值


MAZDA3 : 485mm

MAZDA5 : 498mm

FOCUS MK3 : 524mm

Installation tips 安裝提示

※ Please read the HARDRACE Tech Tips before installing the products.
在安裝之前請詳閱 HARDRACE 技術提示

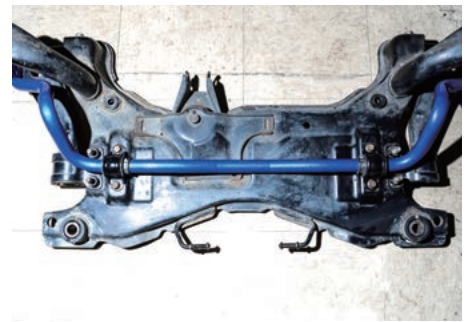

1. Apply clamp plier to lock the clamp ring as tightly as possible. (Please apply hand tools for installation)
使用束環鉗工具將束環固定最緊 (安裝過程請使用手動工具)
2. Lock rings should be placed at the inner side of stabilizer bushings.
緊靠防傾桿橡皮內側

Recommended torque for brackets & end links and bolts.

固定座、李子串、螺絲鎖緊扭力

M10	60~70Nm
M12	80~90Nm

HARDRACE Tech Tips 技術提示

Warning! Risk of Death may be caused by vehicle slipping or toppling off the jacking platform.

警告! 在頂車機的作業下，車輛的滑動或倒塌可能會造成人員致命的危險

Motor vehicle mechanical knowledge is expected. In some country & states, fitment may only be legally performed by a licensed mechanic. Check the regulation in your area.

請預先了解車輛機械知識與檢查在您所屬的國家或區域地方是否需要專業技師執照才可執行更換安裝，以免觸法

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

