

## Application 適用車型

Toyota 86/Scion FR-S '12-20 (ZN6)  
Subaru BRZ '12-20 (ZC6)

## Components 內含配件

- ① Brace 結構桿桿身.....1pcs
- ② Bracket 支架.....2pcs
- ③ Bolt 螺絲 (M8x1.25x20).....4pcs

## Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.  
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.  
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.  
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

## Instructions 安裝說明


### 1. Remove luggage floor mat.

將後行李箱內底板及置物槽拆卸。



### 2. Remove the rear strut top mount nuts.

將後避震器上座螺帽拆卸。

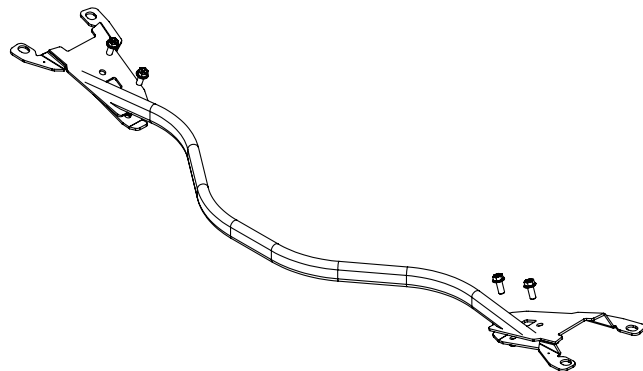


### 3. Install brace to the shock absorber towers.

Insert the brackets and install the supplied M8 bolts to secure the brace and bracket to the body panel. Then reinstall the shock absorber nut.

將結構桿安裝在避震器鎖點位置。

並插入黑色鉸金件。使用M8螺絲將結構桿與鉸金件對鎖，與車體夾緊。完成後將避震器螺帽安裝回原位。

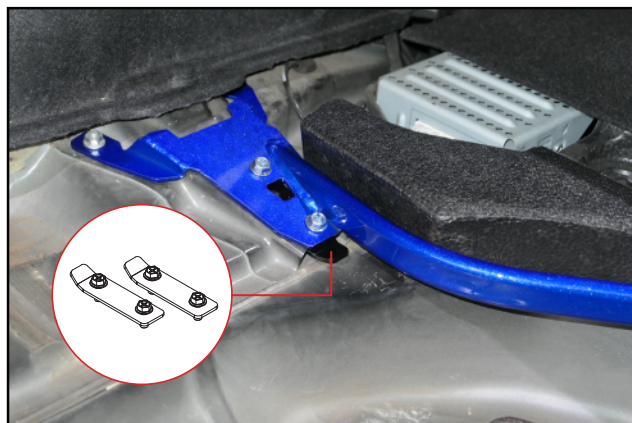

### 4. Reinstall the luggage floor mat.

將行李箱底板安裝回去。

